



FIND YOUR TRANSLATION ON BBBCYCLING.COM



BARBANK



BBB MINIPUMP /BMP-201

BBB CYCLING.COM
SPAARNEPLEIN 2, 2515 VK
THE HAGUE, THE NETHERLANDS



EN MANUAL / DE HANDBUCH / FR MANUEL / NL HANDLEIDING / ES MANUAL / PT MANUAL / IT MANUALE / HU HASZNÁLATI UTASÍTÁS / PL PODRECZNIK / CZ UŽIVATELSKÁ PŘÍRUČKA / JP 使用説明書 / RU РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ / SK MANUÁL / NO HÅNDBOK

IN THE BOX

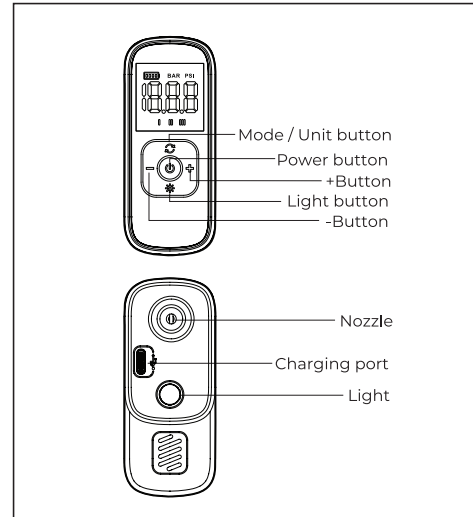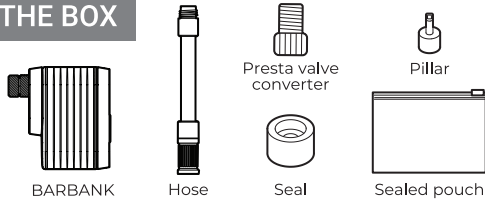


HOW TO USE


PREPARATION

USE DIRECTLY

- The inflator is ready for Presta valve right out of the box. For Schrader valve, please adjust the nozzle accordingly.
- Connect the nozzle directly to the valve. Adjust the nozzle mode and connect it to the valve. Keep a tight grip on the nozzle while inflating.

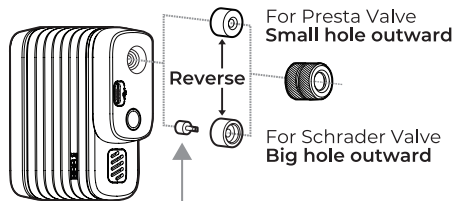


PRESTA VALVE: Remove the pillar.
SCHRADER VALVE: Install the pillar.

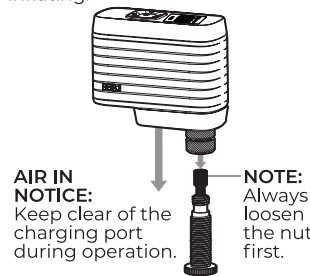

AIR IN NOTICE: Keep clear of the charging port during operation.
NOTE: Always loosen the nut first.

USE WITH THE HOSE

For TPU innertubes: Use the extension hose to prevent heat damage to the tube and valve.

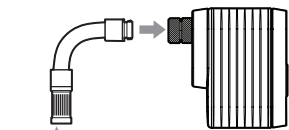

- The hose can be directly connected and used, regardless of presence of the presence of pillar in the nozzle. When the target air pressure is above 100 PSI, please use with the hose to prevent air leakage from the nozzle.
- Hold the hose and the suitable adapter, then connect it to the valve. It's recommended to use the hose when using Schrader valve.

Charge for at least 1 hour before first use. Automatic power off after 1 minute of no activity.

For Schrader valve For Presta valve

HOW TO USE

FUNCTION GUIDE

POWER ON / OFF
Press and hold the Power button to power on/off.

INFLATING
Press the Power button to start inflation. It will auto shut off when the target air pressure is reached.

+ INCREASE VALUE
Press + button to increase pressure value.

- DECREASE VALUE
Press - button to decrease pressure value.

SWITCH INFLATION MODE / UNIT
Press **Mode/Unit** button to cycle through the 3 modes:
• I - 30 PSI / 2 BAR
• II - 45 PSI / 3 BAR
• III - 75 PSI / 5 BAR

Press and hold the **Mode / Unit** button to cycle through units between PSI and BAR

LIGHT ON / OFF
Press **Light** button to switch on / off.

CHARGE - 5V/1A or above
Plug USB cable into charging port with a suitable charger.

SPECIFICATIONS

RATED VOLTAGE	5V / 2A
BATTERY TYPE	7.4V, 600mAh
PRESSURE UNITS	PSI / BAR
INFLATION PRESSURE	3-120 PSI / 0.2-8.3 BAR
PRODUCT DIMENSION	70 x 60 x 32mm
WEIGHT	160g

WARRANTY

We provide limited one-year warranty for the product valid from the date of purchase.

- The warranty does not cover the damage due to misuse, abuse, accidents or non-compliance with the precautions
- The warranty does not cover any damage, losses, costs or expenses, directly or indirectly related to the product
- Item purchased second-handed are not covered within warranty, unless otherwise stipulated by local law

WARNINGS / CAUTIONS

- Please check if the USB cable is in good condition before charging
- Fully charge the product before use
- Only charge rechargeable batteries under adult supervision.
- It's normal for the product to feel warm during use
- The nozzle of the air tube may get hot during use. Please do not touch it.
- Do not use sharp objects to press the button and surface of the product.
- Please keep this product away from fire and high temperature objects
- Do not attempt to carry out repairs on the

product yourself. This will void the warranty and there are no service components available

This product is not waterproof. Do not expose the BarBank to water. We recommend to always place the BarBank inside the sealed waterproof bag when not in use during a ride.

For TPU innertubes: Use the extension hose to prevent heat damage to the tube and valve.

TROUBLESHOOTING

PROBLEM	SOLUTION
Unable to power on.	Make sure the battery has enough charge.
Slow inflation speed.	Check if the battery is fully charged. / Check for air leaks in the hose. / Ensure tight connections at both ends of the hose.
Unable to inflate despite being turned on.	Check if the battery is fully charged. / Check if the current tire pressure is higher than the preset value.
Unable to adjust pressure up or down.	Hold the POWER BUTTON to turn it on again.
The product shuts off automatically after the nozzle is installed.	Hold the POWER BUTTON to turn it on again.
Normal inflation but pressure shows zero.	Tighten the connection.
Leakage when connecting the hose.	Tighten the connection.